

Spare Parts and References

ITEM	STANDARD VERSION			
	Trim 1	Trim 2	Trim 3	Trim 4
1 Valve Release Screw	BVP100S001	BVP200S001	BVP200S001	BVP400S001
5 Valve Head with Insert	BVP100S005	BVP200S005	BVP300S005	BVP400S005
6 Valve Seat	BVP100S006	BVP200S006	BVP300S006	BVP400S006
7 Valve Spring	BVP100S007	BVP200S007	BVP300S007	BVP400S007
9 Large O-Ring	JOIN044V01	JOIN053V01	JOINR41V01	JOINR50V01
10 Small O-Ring	JOINR33V01	JOINR36V01	JOINR36V01	JOINR41V01
Seal Kit	BVK100S001	BVK200S001	BVK300S001	BVK400S001
Complete Repair Kit	BVK100S002	BVK200S002	BVK300S002	BVK400S002

ITEM	STANDARD VERSION			
	Trim 1	Trim 2	Trim 3	Trim 4
2 Plug	Part numbers depend on valve configuration will be supply upon request			
3 Release Rod				
4 Upper Valve Body				
8 Lower Valve Body				

ITEM	H ₂ S SERVICE VERSION			
	Trim 1	Trim 2	Trim 3	Trim 4
1 Valve Release Screw	BVP100S001	BVP200S001	BVP200S001	BVP400S001
5 Valve Head with Insert	BVP100H005	BVP200H005	BVP300H005	BVP400H005
6 Valve Seat	BVP100H006	BVP200H006	BVP300H006	BVP400H006
7 Valve Spring	BVP100S007	BVP200S007	BVP300S007	BVP400S007
9 Large O-Ring	JOIN044V01	JOIN053V01	JOINR41V01	JOINR50V01
10 Small O-Ring	JOINR33V01	JOINR36V01	JOINR36V01	JOINR41V01
Seal Kit	BVK100S001	BVK200S001	BVK300S001	BVK400S001
Complete Repair Kit	BVK100H002	BVK200H002	BVK300H002	BVK400H002

ITEM	H ₂ S SERVICE VERSION			
	Trim 1	Trim 2	Trim 3	Trim 4
2 Plug	Part numbers depend on valve configuration will be supply upon request			
3 Release Rod				
4 Upper Valve Body				
8 Lower Valve Body				